


➤ Instructions

Thule Trail Load Net

8239, 8249

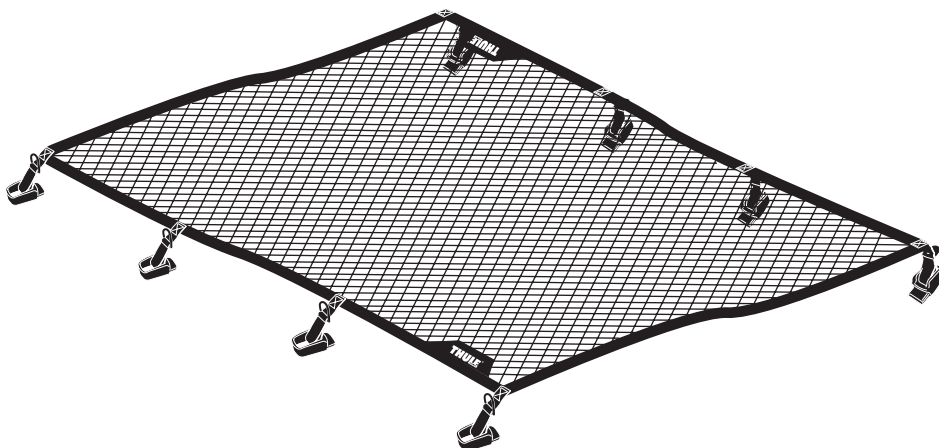

EN Accessories: Baskets for roof-mounted racks
DE Zubehör: Gepäckkörbe für Dachträger
FR Accessoires: Galeries pour barres de toit
NL Accessoires: Dakrekken
IT Accessori: Bagagliere per portapacchi da installare sul tetto
ES Accesorios: Bacas para barras de techo
PT Acessórios: Grades bagageiras para barras de tejadilho
SV Tillbehör: Lastkorgar för takmonterade räckan
DK Tilbehør: Kurve til tagbøjler
NO Tilbehør: Kurver til takmonterte stativer
FI Lisävarusteet: Katolle asennettaviin telineisiin sopivat korit
ET Lisavarustus: Katusele paigaldatavad koormakorvid
LV Piederumi: Uz jumta bagāžniekiem uzstādāmi kravas grozi
LT Priedai: Ant stogo tvirtinamų skersinių krepšiai
PL Akcesoria: Kosze do bagażników dachowych
RU Аксессуары: Корзины для багажников
UK Аксесуари: Кошики для багажників для даху
BG Принадлежности: Кошници за релси, монтирани върху покрива
CS Doplněk: Koše na nosiče pro montáž na střechu

SK Príslušenstvo: Koše na strešné nosiče
SL Dodatki: Košare za strešne prtljažnike
HR/BIH Dodaci: Košare za krovne nosače
RO Accesorii: Bare tip plasă pentru suport montat pe acoperiş
HU Tartozék: Tetőre szerelhető szállítókosarak
EL Εξαρτήματα: Καλάθια για ράβδους οροφής
TR Aksesuarlar: Araç üstüne bağlanan raflar için sepetler

HE الملحق: עריסה לגג הרכב


AR ابيزيريم: سلات للحوامل المثبتة على السقف

ZH 附件: 用于车顶架的车顶筐

JA アクセサリー: ルーフマウント型ラック用バスケット

KO 액세서리: 루프 장착 랙 바스켓


TH อุปกรณ์เสริม: ตะกร้าสำหรับแร็คหลังคา

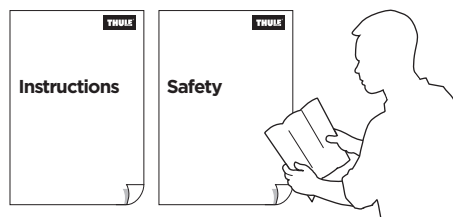

i


8239 ➔ **Trail M 823**

8249 ➔ **Trail L 824**

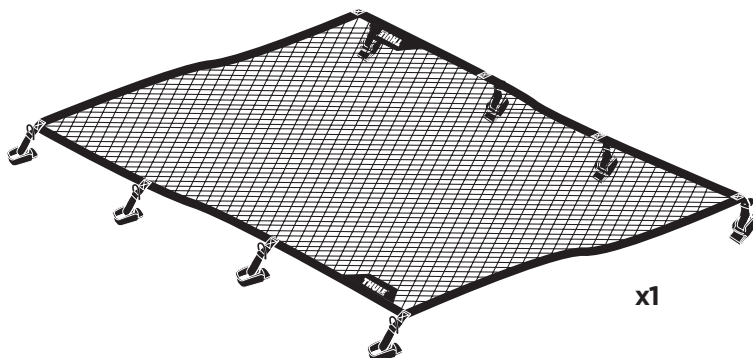


x1


1

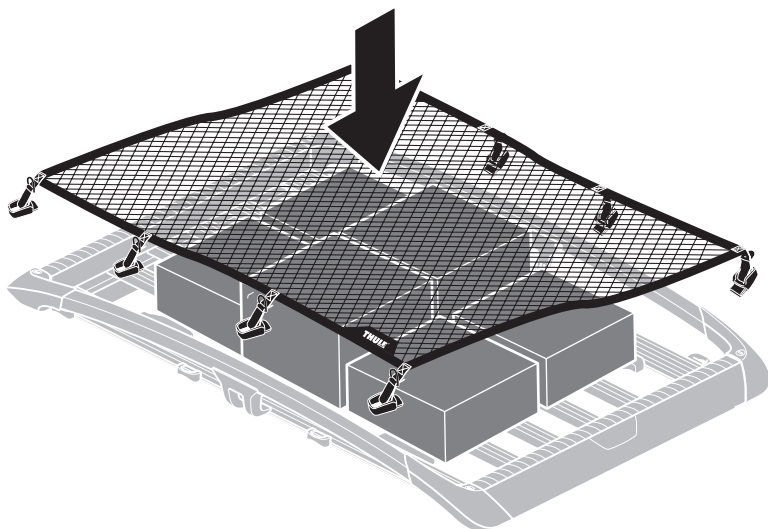

2

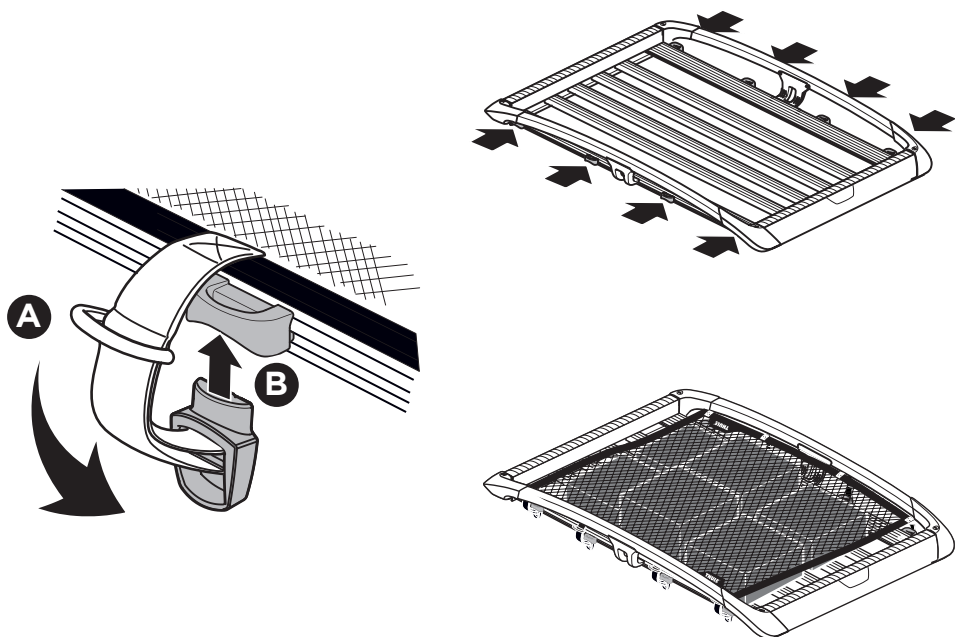

3


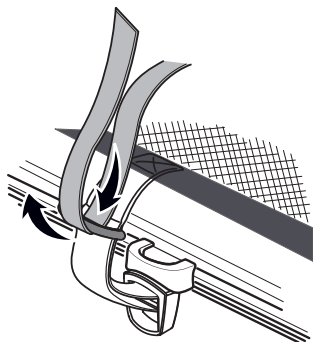


- Thule 521 strap** 1x275 cm
- Thule 522 strap** 1x400 cm
- Thule 523 strap** 2x400 cm
- Thule 524 strap** 2x275 cm
- Thule 551 strap** 2x600 cm






- Thule 841 lockable strap** 2x400 cm

Not ok

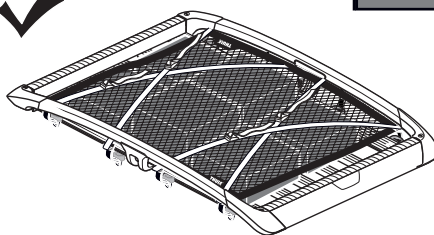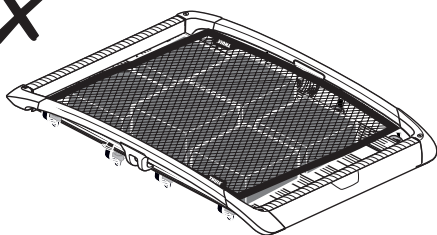

i

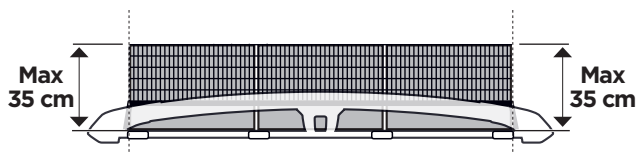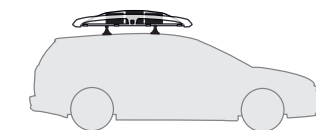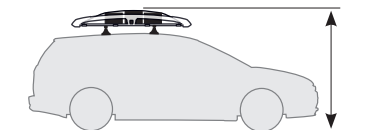

8239



0.7 kg

8249



0.8 kg

